limate Talk Fault Code	Transmitted message	Dealer error message	Possible causes	Corrective actions	Unit Type	Alarm Status	Consumer error messa
00	EEV OPEN CKT	Not used yet			Thermostat		
01		Not used yet			Thermostat		
02		Thermostat internal communication error	ClimateTalk coprocessor was not anle to start.	•Conduct a warm start of the thermostat. •Call Daikin support at 1-855-DAIKIN1(option 1) •Replace thermostat if needed	Thermostat	Critical	Internal hardware er
			ClimateTalk coprocessor did not respond to commands.	<ul> <li>Conduct a warm start of the thermostat.</li> <li>Call Daikin support at 1-855-DAIKIN1(option 1)</li> <li>Replace thermostat if needed</li> </ul>	Thermostat	Critical	Communication erro
03		Thermostat internal communication error	ClimateTalk firmware was not able to upgrade.	Conduct a warm start of the thermostat. Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Communication erro
04		Thermostat software upgrade error	ClimateTalk communication errors.	Replace thermostat if needed     Check for proper 24 VAC powering thermostat.			
05		Thermostat internal communication error		Conduct a warm start of the thermostat.     Call Daikin support at 1-855-DAIKIN1(option 1)     Cleal for any 201100 market in the model.	Thermostat	minor	Communication erro
06		Piezo speaker hardware error	Piezo driver could not start due to hardware error.	•Check for proper 24 VAC powering thermostat. •Conduct a warm start of the thermostat. •Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	minor	Internal hardware er
07		LED hardware error	LED driver could not start due to hardware issue.	<ul> <li>Check for proper 24 VAC powering thermostat.</li> <li>Conduct a warm start of the thermostat.</li> <li>Call Daikin support at 1-855-DAIKIN1(option 1)</li> </ul>	Thermostat	minor	Internal hardware er
08		Thermostat software upgrade error	OTA download signature is wrong, reverting back to previous firmware.	Check for proper 24 VAC powering thermostat.     Conduct a warm start of the thermostat.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	minor	Communication erro
09		Thermostat software upgrade error	OTA upgrade failed.	Check for proper 24 VAC powering thermostat.     Conduct a warm start of the thermostat.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	minor	Communication erro
0A			Proximity sensor driver could not start due to hardware issue.	<ul> <li>Check for proper 24 VAC powering thermostat.</li> <li>Conduct a warm start of the thermostat.</li> <li>Call Daikin support at 1-855-DAIKIN1(option 1)</li> </ul>	Thermostat	minor	Internal hardware er
		Proximity sensor hardware error	Temp/Hum sensor driver could not start due to hardware issue.	<ul> <li>Conduct a warm start of the thermostat.</li> <li>Call Daikin support at 1-855-DAIKIN1(option1)</li> <li>Replace thermostat if needed</li> </ul>	Thermostat	Critical	Internal hardware er
OB		Temperature/Humidity sensor hardware error	Temperature sensor failed during operation.	•Conduct a warm start of the thermostat. •Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Internal hardware er
0C		Temperature/Humidity sensor hardware error	Humidity sensor failed during operation.	Replace thermostat if needed     Conduct a warm start of the thermostat.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Internal hardware er
0D		Temperature/Humidity sensor hardware error	WIFI driver could not start due to hardware issue.	Replace thermostat if needed     Check for proper 24 VAC powering thermostat.     Conduct a warm start of the thermostat.	Thermostat	minor	Internal hardware er
OE		Wi-Fi hardware error	WIFI driver communication issue.	Call Daikin support at 1-855-DAIKIN1(option1)     Check for proper 24 VAC powering thermostat.			
OF		Wi-Fi hardware error	<ul> <li>data1 and data2 could be reversed</li> </ul>	Conduct a warm start of the thermostat.     Call Daikin support at 1-855-DAIKIN1(option1)     Check polarity of Data1 and Data2.	Thermostat	minor	Communication erro
1E		Heat Pump communication loss	<ul> <li>loss of power to the unit.</li> <li>Loose, cut, or broken wire.</li> </ul>	Check for any blown fuses or tripped breakers.     Check for loose terminations, shorted or broken wires.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Communication err
			<ul> <li>data1 and data2 could be reversed</li> <li>loss of power to the unit.</li> <li>Loose, cut, shorted, or broken wire.</li> </ul>	Check polarity of Data1 and Data2.     Check for any blown fuses or tripped breakers.     Check for loose terminations, shorted or broken wires.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Communication err
1F		Air Conditioner communication loss	<ul> <li>Loss of power to system.</li> <li>Thermostat software update(OTA).</li> </ul>	No action needed.	Thermostat	minor	Communication err
10		Thermostat reboot	Manual reboot of thermostat.     data1 and data2 could be reversed	<ul> <li>Check polarity of Data1 and Data2.</li> </ul>	Thermostat		communication en
20		EEV Coil communication loss	<ul> <li>loss of power to the unit.</li> <li>Loose, cut, or broken wire.</li> </ul>	Check for any blown fuses or tripped breakers.     Check for loose terminations, shorted or broken wires.     Call Daikin support at 1-855-DAIKIN1(option 1)	Thermostat	Critical	Communication err
			•data1 and data2 could be reversed loss of power to the unit. •Loose, cut, or broken wire.	Check polarity of Data1 and Data2.     Check for any blown fuses or tripped breakers.     Check for loose terminations, shorted or broken wires.     Call Daikin support at 1-855-DAIKIN2(option 1)	Thermostat	Critical	Communication err
21		Air Handler communication loss	• data1 and data2 could be reversed •loss of power to the unit. •Loose, cut, or broken wire.	Check polarity of Data1 and Data2.     Check for any blown fuses or tripped breakers.     Check for loose terminations, shorted or broken wires.     Call Dakins support at 1-355-DAI(NI)(20)(100 1)	Thermostat	Critical	Communication err
22	1	Furnace communication loss	1	<ul> <li>Can Dalkin Support at 1-655-DAlkIN1(0ption 1)</li> </ul>		1	

Thermostat EEV Coil AHU (indoor) Furnace (indoor) 2-Stage AC (outdoor) AC\_HP Unitary (outdoor)

F